

## Core range technical guide



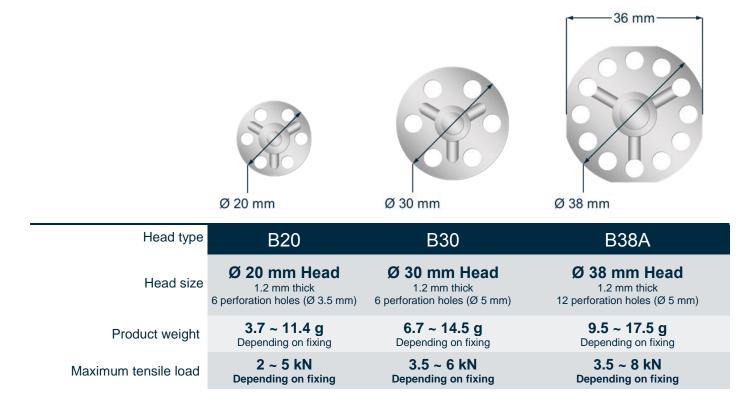

### **Product range**

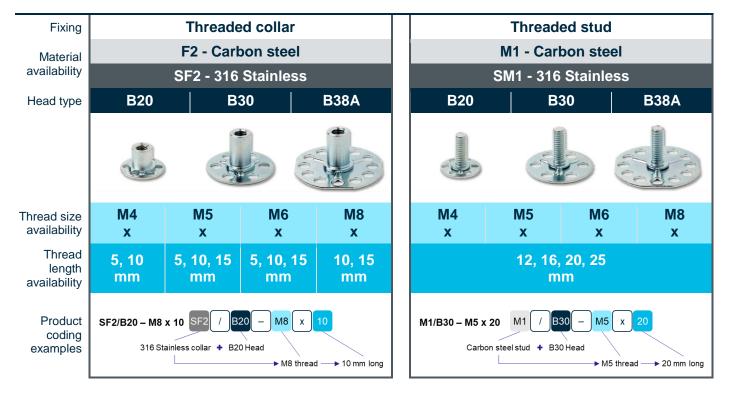


The information within this document is for guidance purposes only and does not constitute a guarantee or warranty of any kind. bigHead cannot accept liability for performance arising from use of these products. Application suitability should always be determined by appropriate testing and evaluation. Drawings and diagrams are for illustrative purposes only and may differ from actual products. For technical inquiries, please contact bigHead on +44 (0) 1202 574 601 or visit www.bigHead.co.uk.

## Core range technical guide


# bigHead®

#### **Process integration options**

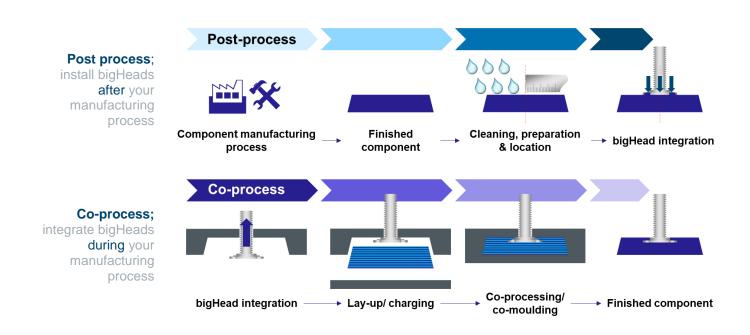

### Assembly design - critical considerations

bigHead do not provide generic assembly tightening torque recommendations for Core range products. Assembly designs and parameters must always be qualified by appropriate testing. For more information on assembly design and parameters, and available engineering support, please contact your distributor or bigHead.

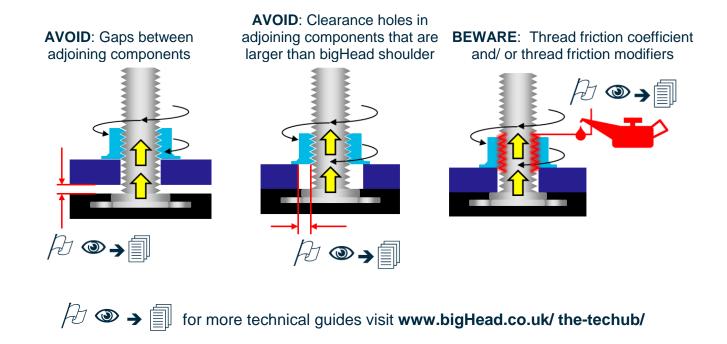

The information within this document is for guidance purposes only and does not constitute a guarantee or warranty of any kind. bigHead cannot accept liability for performance arising from use of these products. Application suitability should always be determined by appropriate testing and evaluation. Drawings and diagrams are for illustrative purposes only and may differ from actual products. For technical inquiries, please contact bigHead on +44 (0) 1202 574 601 or visit www.bigHead.co.uk.